



www.naturkind.com



Ida

Operating and Cleaning Instructions Version 1.0 EN



Dear parents!

We are pleased that you have opted for a Naturkind stroller!

As manufacturers, we have a strong sense of responsibility and are consistently committed to achieving our goal: To develop and produce strollers that your baby truly feels comfortable in and that assure your child a good and healthy start in life.

All our efforts are focused on creating a cozy first "living space" for your baby, with loving attention to detail and the finest materials we can find. This is our aim, and we pursue it with love, great sensitivity and a sense of responsibility. It is important to us to equip every single Naturkind stroller with our philosophy.

We thank you for the trust you have placed in us and hope you have a lot of fun with your new Naturkind Ida.

Peter Doppler, Naturkind-Founder

Contents

1. Delivery Contents	34
2. Warnings and Compatibility	35
2.1 Warnings	35
2.2 Compatibility of Naturkind products with Naturkind frames	38
3. Operation	39
3.1 Your Naturkind stroller	39
3.2 Setting up the frame	41
3.3 Activating and releasing the parking brake	41
3.4 Adjusting the height of the steering arm	42
3.5 Adjusting the inclination of the backrest	42
3.6 Adjusting the inclination of the footrest	43
3.7 Putting on, adjusting and opening the safety belt	44
3.8 Adjusting the fixation of the safety belt in the backrest and in the seating surface	44
3.9 Mounting and removing the safety bar	45
3.10 Attaching the seating unit or hard carrycot to the frame	46
3.11 Securing soft carrycot in your stroller	47
3.12 Removing the seating unit or hard carrycot from the frame	49
3.13 Folding the frame	50
3.14 Locking and releasing the front wheels	50
3.15 Removing and mounting the wheels	51
3.16 Removing the roof	52
3.17 Adjusting the fixation of the roof	52
4. Care 53	
4.1 Fabric parts	53
4.2 Cork handles	54
4.3 Wheels	54
5. Maintenance	55
5.1 General information	55
5.2 Wheel alignment	56
6. Guarantee	57
6.1 Provisions	57
6.2 Examples	58

This stroller is suitable for children from six months up to a weight of 22 kg. It is only suitable for children under six months in combination with a matching soft carrycot or a matching hard carrycot. This model is not suitable for jogging, skating or similar activities.

IMPORTANT! PLEASE READ CAREFULLY AND BE SURE TO KEEP FOR FUTURE REFERENCE.

1. Delivery Contents

Ida	
1 pc.	frame
4 pcs.	Solight ecco wheels
Seating unit Ida	
1 pc.	seating unit with integrated cork boards
1 pc.	safety belt (five-point belt with belt centerpiece)
1 pc.	safety bar
1 pc.	seat cover
1 pc.	roof with roof mount
1 pc.	safety bar cover
2 pcs.	shoulder pad
1 pc.	instructions Ida

Optional: soft carrycot	
1 pc.	cover for soft carrycot
2 pcs.	shoulder strap
1 pc.	fastening strap
1 pc.	coco-latex mattress
1 pc.	wooden board (lying surface)
2 pcs.	wooden board (side part left and right)
1 pc.	wooden board (headrest)
1 pc.	wooden board (footrest)
1 pc.	instructions soft carrycot
Optional: hard carrycot Ida	
1 pc.	hard carrycot including roof
1 pc.	mattress cover
1 pc.	lateral cloth lining
1 pc.	coco-latex mattress
1 pc.	instructions hard carrycot Ida

Ida



with hard carrycot



with soft carrycot



sports stroller

2. Warnings and Compatibility

2.1 Warnings

NOTE!

Subject to technical modifications.

Please read these instructions carefully before you use your stroller and follow the instructions to assure maximum security for your child, so you can enjoy your stroller for a long time.

Read the following information and warnings carefully before use and keep the instructions for future reference. If you do not observe the information and warnings mentioned here, it could have an effect on your child's safety. Please explain the exact operation to everyone who uses your stroller!

If you fail to observe this, we cannot accept any liability for accidents!

- This stroller is exclusively intended for children from the age of six months up to a weight of 22 kg.
- This stroller is only suitable for children under six months in combination with a matching soft carrycot or a matching hard carrycot.
- The maximum load of the stroller may not exceed 22 kg.

WARNING!

- ! Never leave your child unattended!
- ! Ensure that all locks are engaged before use.
- ! To avoid injuries, ensure that your child is out of reach when you fold and unfold the stroller.
- ! Do not let your child play with the product.
- ! Use a seatbelt as soon as your child is able to sit upright unaided.
- ! This seating unit is not suitable for children under six months.
- ! Always use the restraint system.
- ! Ensure that the seating unit or the hard carrycot or the adapter is correctly engaged before use.
- ! This product is not suitable for jogging or skating.
- ! The seating unit or the hard carrycot or the soft carrycot cannot be used in the car.
- ! Before each use, check whether the stroller or soft carrycot or hard carrycot is damaged or parts are broken or torn – if they are, the stroller may not be used under any circumstances!
- ! Do not place any additional mattresses in the stroller.
- ! Use the crotch strap only in combination with the lap belt.
- ! Do not fasten any loads to the slider or the sides of the stroller. This affects its stability.
- ! Always actuate the parking brake when you park the stroller and check whether the back wheels are blocked.
- ! Always make sure that the parking brake is applied when you put your child in the stroller or take your child out of the stroller.
- ! In order to prevent your child from suffocating, keep small objects away from your child.
- ! Attaching an additional seat to the stroller is prohibited.
- ! Strollers, sport strollers, soft carrycots and hard carrycots are no replacements for beds and may only be used for the transportation of your child.
- ! For safety reasons, only use original accessories and spare parts provided by Naturkind.
- ! Keep the stroller away from fire.
- ! Never lift your stroller off the ground when your child is in it.
- ! Take your child out of the seating unit before you remove the seating unit from the frame.

Please also note:

- The maximum load of the shopping basket may not exceed 5 kg.
- Keep the rain protection away from children.

Important information for machine washing:

After only 2 to 3 seconds, virgin sheep's wool begins to contract and cannot return to its baseline condition when it is spin-dried!

However, many washing machines spin automatically in the default setting at the end of the wool program. For this reason, the spin-dry function at the end of the wool wash program either needs to be turned off separately before the washing process, or – if this should not be possible – the washing process needs to be interrupted by interfering in the wool wash program before the spin-dry stage!

For more information on care instructions for the fabric parts, see part 4 on page 53.

2.2 Compatibility of Naturkind products with Naturkind frames

	Ida	Lux	Varius Pro
Seating unit Lux/Ida	✓	✓	
Seating unit Varius Pro			✓
Hard carrycot Ida	✓	✓	
Hard carrycot Ida braided	✓	✓	
Hard carrycot Lux	✓	✓	
Hard carrycot Varius Pro			✓
Hard carrycot Max	✓	✓	
XL hard carrycot			✓
Soft carrycot	✓	✓	✓

WARNING! Never use combinations of Naturkind products and Naturkind frames that are incompatible with one another!

3. Operation

3.1 Your Naturkind stroller



The controls that are necessary to operate the most frequently used functions are executed in gray color on the frame and the seating unit. Among other things, your stroller is equipped with the following functions. You can find a detailed description of these and other functions on pages 39 to 52.

- The height of the steering arm (a) can easily be adjusted according to your individual needs – so that not only your child but also you feel comfortable and safe with the stroller. The steering arm can be adjusted with its height adjustment (1). For further information on this, see page 42.
- The foldable frame enables you to transport and store your stroller. To fold the frame, activate the release levers (2) on both sides of the stroller. For further information on mounting and folding, see pages 41 and 50.
- The seating unit can be removed, which makes your stroller more flexible regarding space requirements when you park it. The procedure to fixate and remove the seating unit is described on pages 46 and 49.
- The adjustable backrest (b) enables your child both to lie in a flat position and to sit in three adjustable inclinations. The lever for adjusting the backrest is located at its back. For further information, see page 42.
- The footrest (c) can be quickly adjusted to the different requirements and abilities of your child. The footrest is adjusted by pressing the buttons to adjust the footrest (3). For further information on this, see page 43.
- The roof part can be quickly adjusted according to changing weather influences. In order to do so, adjust the bars of the roof part (4). Moreover, a mosquito net is integrated in the roof part. You can adjust its opening with the overlying zipper.
- The parking brake serves the purpose of securing the stroller against rolling away on sufficiently level and rough ground. Activate and release the parking brake via the brake bar (5). For further information on this, see page 41.
- This stroller is equipped with a shopping basket (d).

3.2 Setting up the frame



Lift the steering arm (a) upward until the frame has set itself up and both locks have audibly engaged.

WARNING! Before using the stroller, make sure that all locks are engaged!

Please pay attention to contact points when setting up the frame. These can lead to injuries as a result of carelessness.

3.3 Activating and releasing the parking brake



1. The parking brake is activated by pressing the break bar (5) down. Afterwards, push the stroller a few centimeters forward until the brake engages. Make sure that the brake is engaged – the rear wheels of the stroller must be blocked.
2. You release the parking brake by lifting the brake bar upwards.

WARNING! Before you put your child into the stroller or take your child out of it, always make sure that the parking brake is activated.

Always check whether the back wheels of the stroller are blocked after you activate the parking brake. Only let go of the stroller if you are certain that the parking brake works.

3.4 Adjusting the height of the steering arm



Push both buttons on the exterior of the steering arm (1) to adjust the height of the steering arm and move it to the desired position.

WARNING! When you are adjusting the height of the steering arm, please beware of resulting clamping points. They can cause injuries in a moment of distraction.

3.5 Adjusting the inclination of the backrest



To adjust the backrest, pull at the lever (8) and select the desired inclination. Make sure that the backrest engages and that it keeps its set inclination.

WARNING! The sitting position is not suitable for children under the age of 6 months.

When you are adjusting the backrest, please beware of resulting clamping points. They can cause injuries in a moment of distraction.

3.6 Adjusting the inclination of the footrest



Push the buttons for adjusting the footrest (3) on both sides of the seating unit, keep them pressed and ensure that the footrest engages in the desired inclination.

WARNING! Whenever you use the soft carrycot, the footrest must always be in a level position, as a support.

Neither the footrest (c) nor the safety bar (e) may be used to lift or carry the stroller.

3.7 Putting on, adjusting and opening the safety belt



1. Activate the parking brake (see section 3.3 on page 41) before you place your child in the seating unit.
2. Use the sliding buckles (9) to shorten or lengthen the belt, if required.
3. Place your child in the stroller and prepare the belts for fastening by placing the shoulder belts (10) around the shoulders and the crotch strap (11) between your child's legs.
4. Push the buckles that are fastened to the shoulder straps into the center piece so that it clicks. Make sure that the buckles are correctly engaged in the center piece. You can open the seat belt again by pushing in the tongues of the buckles that are in the center piece and pulling out the buckles.



WARNING! Use the safety belt as soon as your child can sit upright unaided.

3.8 Adjusting the fixation of the safety belt in the backrest and in the seating surface

The backrest of the seating unit offers three heights for fastening for the two shoulder straps. In order to change them, first release the existing fixation:

1. Open the zipper at the back of the backrest. Expose the plastic parts (12) that are at the back of the backrest and thereby fixate the attached shoulder straps in the belt holes.
2. Insert the plastic parts (12) with the narrow edge first in the belt holes in the backrest.
3. Pull at the shoulder straps on the inside of the backrest to pull the plastic parts (12) completely through the belt holes and thereby release the fixation of the shoulder straps.



Fixate the shoulder straps in your desired height in the backrest:

1. First, hook the plastic parts (12) in the slots in the seat cover according to your desired fixation height. Make sure that both shoulder straps are fixated in the backrest at the same height.
2. Afterwards, push the plastic parts (12) with the narrow edge first completely into the belt holes in the backrest that are located behind the slots in the seat cover.
3. Pull at the shoulder straps on the inside of the backrest to fixate the straps and make sure that they are firmly inserted.

The seating area of the seating unit offers three positions to fixate the crotch strap. Change them in line with the fixation of the shoulder straps.

WARNING! The safety belt must always be fixed in the backrest when you put your child in the seating unit.

3.9 Mounting and removing the safety bar



The safety bar is mounted as follows:

1. Place the safety bar in the bracket.
2. Put the sling (13) around the safety bar (e) and close its snap button.
3. In order to remove the safety bar, press the light gray push buttons on both sides of the bracket while slightly lifting the safety bar upward. Afterwards, pull the safety bar out of the bracket.



WARNING! Be careful not to get your child or yourself caught when you mount the safety bar.

3.10 Attaching the seating unit or hard carrycot to the frame




1. Activate the parking brake (see section 3.3 on page 41).
2. Insert the pins that are located on both sides of the seating unit and the hard carrycot in the provided receivers (16) in the frame.
3. Push the seating unit or the hard carrycot with the pins into the receivers until the pins engage in the receivers.

WARNING! Before use, make sure that the seating unit or the hard carrycot is properly engaged.

When you are fixing the seating unit to the frame, there must be no child in the seating unit.

Make sure that you only lift the seating unit at its lateral recessed grips. The roof of the seating unit, the toy bar and the footrest are not suitable for lifting.

3.11 Securing soft carrycot in your stroller

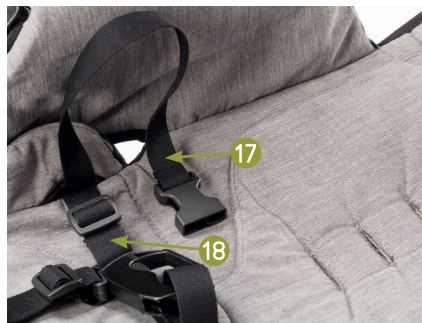

If the fastening strap is not fixed on the frame, you must fixate it.

For this purpose, proceed as follows:

1. The fastening belt (17) consists of two belt pieces, whereby a buckle is attached to instructions: one belt piece and a center piece is attached to the other. Rectangular parts are attached to the other end of the belt pieces. Push this rectangular part of one of the fastening belt pieces through the slot in the cover where the lap belt (18) is inserted.
2. Push the rectangular part of the same fastening belt piece with the narrow edge first through the slots in the frame in which the lap belt is inserted.
3. Pull both at the fastening belt piece as well as at the lap belt piece on the inside of the seating unit so that the rectangular parts can be fixed against the frame.
4. Repeat this process with the other fastening belt piece on the other side of the frame. Make sure that the fastening belt is in place.

WARNING! As soon as the soft carrycot is no longer in use, the fastening belt must be removed.

The fastening belt can only be used for fastening the soft carrycot. It must not be used to buckle up your child!



As soon as the fastening belt is fixed to the frame, use it to secure the soft carrycot:

1. Activate the parking brake (see section 3.3 on page 41).
2. Place both the footrest (c) and the back part (b) of the seating unit in a flat position (see section 3.5 on page 42 and section 3.6 on page 43).
3. Let the fastening belt (17) hang out of the seating unit on both sides. Spread out the shoulder strap (10), the lap belt (18) and the crotch strap (11) in the seating unit. Place the soft carrycot with the head area at the roof part and the foot area at the foot part in the seating unit.
4. Secure the soft carrycot with the fastening belt (17) by closing the belt and tightening it.
5. Insert the belt strap in the foot area of the soft carrycot (19) in a slot in the footrest and loop it around a material piece. Close the snap button on the belt strap.

WARNING! Never tighten the fastening belt so securely that your child is restricted in the soft carrycot or even exposed to force.

3.12 Removing the seating unit or hard carrycot from the frame



1. Activate the parking brake (see section 3.3 on page 41).
2. Press the light gray push button (20) on one side of the stroller.
3. Repeat this on the other side of the stroller.
4. Remove the seating unit or the hard carrycot.

WARNING! When you are removing the seating unit from the frame, there must be no child in the seating unit.

Make sure that you only lift the seating unit at its lateral recessed grips. The roof of the seating unit, the toy bar and the footrest are not suitable for lifting.

3.13 Folding the frame



1. Remove the seating unit or the hard carrycot from the frame (see section 3.12 on instructions page 49) and empty the shopping basket (d).
2. Press down slightly at the frame, and simultaneously pull both release brackets upwards. Ensure that the folding levers remain in this position and push the steering arm forward until it forms an arch before arriving at the front of the frame.

WARNING! Please pay attention to contact points when folding the frame. These can lead to injuries as a result of carelessness.

3.14 Locking and releasing the front wheels



1. To lock the front wheels, pull the locking lever (6) to the left and rotate the wheels until they engage.
2. To activate the mobility of the front wheels, pull the locking lever (6) to the right.

3.15 Removing and mounting the wheels

WARNING! After mounting is completed, make sure that the wheels have been firmly mounted. In order for the wheel to run smoothly, it needs to feature axle clearance

You have the option to remove the wheels in a way that the wheel axles remain mounted in the rear axle of the stroller. The process of removing and mounting depends on the rear wheel design, as described below.



1. Press on the silver metal splint and pull the wheel away from the axle.
2. For mounting, place the wheel onto the axle until you reach the mechanical stop, press on the metal splint and push the wheel approx. one centimetre further onto the axle. Release the splint, and slowly pull the wheel outwards again until it audibly engages. Important: Make sure that the wheels have been firmly mounted.

3.16 Removing the roof



To remove the roof, please proceed as follows:

1. Open the zipper at the end of the roof.
2. Push the gray push button (23) at the plug-in part of the roof. Pull the plug-in part of the roof toward the footrest to release the roof there. Repeat this process on the other side of the roof.
3. In order to put the roof back on, place the plug-in part of the roof in the provided receivers. Afterwards, close the zipper at the end of the roof.

WARNING! Do not put any loads on the roof.
Never carry the seating unit on the roof.

3.17 Adjusting the fixation of the roof

1. First, remove the black protective cap at the roof hinge on both sides of the roof.
2. To adjust the fixation of the roof, hold the nut on the outside of the roof hinge either with a slotted screwdriver that you press against an edge of the nut or with a socket wrench.
3. Turn the screw that is on the inside of the roof hinge while holding the nut:
 - in clockwise direction to increase the fixation of the roof (adjusting the roof will be more difficult).
 - counter-clockwise to release the fixation of the roof (adjusting the roof will be easier).
4. Repeat the process on the other side of the roof. Make sure that the fixation is equally adjusted on both sides of the roof.
5. Afterwards, reattach the black protective cap.

WARNING! Check the fixation regularly.

Do not tighten the screw too firmly – this damages the roof plug-in.

4. Care

4.1 Fabric parts

All cotton fabrics come from controlled organic cultivation and are dyed on a natural basis. This natural fiber is more sensitive than synthetic fiber and is therefore quicker to bleach. Please be sure to observe the following care

instructions for the fabrics. Otherwise, the virgin sheep's wool that is used as filling material may become felted, exit the material or become unevenly distributed.

- ! Clean small stains carefully with a damp towel and clear water. Please avoid rubbing or scratching.
- ! All removable pieces of fabric (seat cover, roof part, safety bar cover and shoulder padding) can be washed with liquid heavy-duty detergents in the washing machine at a maximum water temperature of 30°C with a wool program.
- ! Do not use detergents with optical brighteners – they can change or destroy the color particles.
- ! Turn the spin-dry function off (no spin-drying, no final spin) and avoid wringing out the fabric parts after washing.
- ! Turn the fabric pieces inside out and use a laundry net.
- ! Reduce the amount of laundry strongly, fill the drum only up to one third.
- ! Only let the fabric parts air-dry and, as far as possible, let them dry in the shade. Never use a dryer.
- ! Shake the dried fabric parts to fluff up the virgin sheep's wool.

The dyed fabrics exhibit the following light fastness and abrasion resistance:

fabrics	light fastness	abrasion resistance	
		dry	wet
light organic cotton colors	3 to 4	3	2
dark organic cotton colors	3 to 4	2	2

Please note that higher ozone levels have a negative effect on the color fastness of the fabrics. Because fabrics also react sensitively to solar radiation, we recommend to keep the stroller away from the blazing sun.

4.2 Cork handles

Clean dirty cork handles by wiping them with lukewarm soapy water and a soft cloth. Do not use any abrasive cleaning agents or cleaning rags.

4.3 Wheels

The wheels are not balanced. Therefore, a production-related imbalance cannot be excluded and does not constitute a defect.

- Wheel sockets and fixed plates are wear parts and must be renewed, if necessary, as otherwise the stroller's safety can no longer be ensured.
- Clean and maintain the rims regularly.
- Heat and pressure marks can permanently deform the wheels.

WARNING! The tires can leave tire marks or discolorations on certain flat surfaces (particularly vinyl plastic laminate, parquett flooring and linoleum flooring).

5. Maintenance

5.1 General information

If you have questions about maintenance or repairs please contact our customer service at service@naturkind.com or Phone +43 7235 62243.

Please perform the following maintenance work at least once a month:

- Clean and grease the axle.
- Check the wheel sockets and the fixed plates. Exchange them, if necessary.
- Readjust the self-securing screws of the roof fixation. If necessary, exchange them – for instance, if the hood no longer remains in the adjusted position although you set the fixation of the roof to maximum according to section 3.20 on page 23.
- Check all screw connections. Tighten the screws, if necessary.
- Oil all movable parts (springs, hinges).
- Oil all brake parts (brake pedal, brake bolt).
- Rid small paint damages of dirt and rust with fine sandpaper. Afterwards, carefully apply a new coating layer to the affected areas with a paint stick from a specialist shop, according to the instructions.

WARNING! Please note that the stroller needs to be cleaned after every use under certain environmental conditions (proximity to the ocean, grit, contact with sand, etc.).

Whenever your stroller comes in contact with cleaning agents, please note that the corresponding parts of the stroller need to be oiled.




Avoid bumping axles or wheels into objects – this prevents the deformation of the frame! A frame that has been deformed by mechanical force can no longer be used and does not constitute a guarantee claim.

5.2 Wheel alignment



To set the track, proceed as follows:

1. Lock the front wheels
2. Check whether front and rear wheel are in alignment.
3. If not, open both nuts at the track rod and remove the screw.
4. Open the lock nut at the track rod by two or three revolutions. The direction of the wheel can be changed by screwing or unscrewing the eyebolt. Unscrewing has the effect that the front wheel moves inwards. Screwing has the effect that the front wheel moves outwards.
5. Tightly screw the lock nut again at the eyebolt. Reinsert the screw and the nut and tighten them.
6. Front and rear wheel should now be in alignment.
7. In order to attain perfect steerability, it is recommended to provide the two front wheels with a few millimetres of toe-in (see sketch „Fig. 1); the two front wheels point slightly inwards).

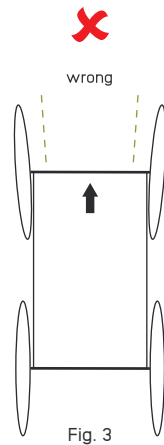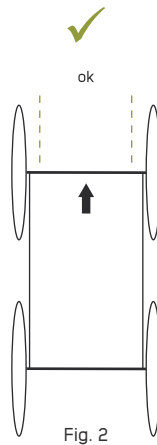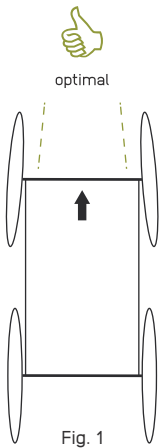

6. Guarantee

6.1 Provisions

You have a guarantee claim within a period of two years for this stroller. The period starts with the delivery of the product by the distributor. Please keep your receipt as proof; a complaint cannot be processed without an invoice.

The guarantee concerns all defects in material and workmanship that are present at the time the product is delivered.

The guarantee does not cover the following points:

- wear marks,
- consequences of improper use,
- consequences of excessive use or load,
- consequences of incorrect assembly or repair,
- consequences of careless handling or a lack of care and maintenance,
- consequential damages that result from smaller, disregarded damages or defects,
- consequences of improper or independent repairs or changes of the product without prior approval of Naturkind.

6.2 Examples

None of the following examples are guarantee claims:

- Color differences cannot always be avoided during production and do not constitute a reason for complaint.
- The fading or lighter edges of textiles do not constitute a material defect, they are a result of normal wear and tear.
- Mechanical effects, such as friction or rubbing or improper use, that create holes or rubbing spots in the material.
- If the stroller textiles are washed correctly, the material, and the sheep's wool, do not change! Please be sure to observe the washing instructions in the care instructions carefully. If the fabric cover exhibits the following defects after washing, this is clearly due to improper washing and does not fall under the guarantee:
 - shrinking of fabric cover
 - wool is felted
 - wool has penetrated the material
 - the wool is no longer evenly distributed in the cover.
- Wool and material are matched with one another, so that the wool hardly penetrates the material under normal use. However, it is natural for wool fibers to penetrate the material under normal use, due to mechanical wear. You can simply remove these fibers with a clothes brush.
- Tearing of the seams or push buttons: When purchasing your stroller, please check whether all fabrics have been properly sewn and whether the push buttons are securely fixed. In the event of a claim, we kindly ask you to submit your claim immediately within a period of two (2) weeks. Claims that are made later than one (1) month after your child's birth-day cannot be accepted and are regarded as a result of wear.
- The frame and the tubes are protected against rust by high-quality paint. If scratches that result from the usage of the stroller are not treated according to the instructions, this can lead to rust spots. Due to the effects of salt (grit in the winter, ocean water, etc.), scratched spots on the tubes as well as rivets and screws can get rusty. Here, it is especially important to pay special attention to the care and maintenance of the frame.
- With plastic parts, there is a certain risk of breakage when loaded at very low temperatures, which is why the stroller must be stored in frost-proof rooms. Broken plastic parts are covered by the guarantee if they turn out to be material defects after being tested accordingly.
- The handles consist of the pure natural material cork and, under normal use, have a service life of over a year. The guarantee does not cover damages of the cork handles due to friction, an exposure to rubbing or other improper use.
- The suspension system is subject to wear; a slackening of the springs due to long and intensive use is entirely normal.
- Worn tires are a natural sign of wear and tear.
- Wheel sockets can also be worn down by excessive use and wrong or inadequate maintenance.
- Avoid bumping axles or wheels into objects – this prevents the deformation of the frame! A frame that has been deformed by mechanical force can no longer be used and does not constitute a guarantee claim.



Out of love. Naturally.

Our Naturkind manufacturing facility is located in the beautiful Mühlviertel in Upper Austria, surrounded by rolling hills. Every pram is made by hand and put through its paces. Only then does it leave our manufacturing facility and set off on a journey to families across Europe. Our suppliers come exclusively from Austria, Germany and neighbouring European countries.

Naturkind Kinderwagen works according to the highest ecological standards and is the only pram manufacturer to be GOTS-certified.



organic
wool fleece



organic
cotton



wood



cork



coconut
fibre

Our models comply with the Euro standards „EN 1888-2:2019“ and „EN 1466:2015“.